


# New authentication in XENTRY Diagnosis

Before **commissioning, programming, or coding any kind of control unit (XENTRY Flash)**, you have to perform two-factor authentication in XENTRY Diagnosis.

## Multi-factor authentication

### You will need this in future

- **As usual**  
your user name and password.
- **Plus:**
  - an authentication app on your smartphone or
  - a USB security key

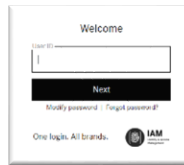


### Authentication in XENTRY Diagnosis

- You will be automatically directed through the authentication process for each XENTRY Flash process.
- The relevant window will open automatically in XENTRY Diagnosis.



### Smartphone app

- Please install an authentication app on your smartphone.
- Please note: the app must correspond to the **RFC 6238 TOTP standard**.

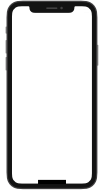

Or:

### USB security key

- Please purchase a sufficient number of USB security keys.
- You can obtain these from electronics retailers or the manufacturer directly.
- Please note that the USB security key has to correspond to the **FIDO2 standard**.



### Multi-factor authentication is mandatory for all XENTRY Diagnosis users globally.



# This is how authentication in XENTRY Diagnosis works




Multi-factor authentication is required when commissioning, programming, and coding all control units.

## Preparation

We recommend that you set up a second factor beforehand via the following URL: <https://login.mercedes-benz.com/password/mfa-settings>

## Initial login

- 1 Use XENTRY Diagnosis as usual. As soon as required, XENTRY Diagnosis will refer you to the authentication.
- 2 Click on the button “Log in user” to complete the login with all required user information (in this case the two-factor authentication).
- 3 If you have not yet saved the second factor, set it up now for authentication.
- 4 Once you have completed the process, authentication will be confirmed. You can now continue working in XENTRY Diagnosis as usual.

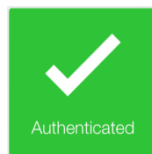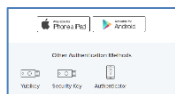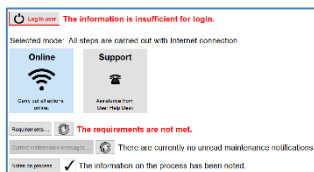

## From the second login

- 1 Use XENTRY Diagnosis as usual. As soon as required, XENTRY Diagnosis will refer you to the authentication.
- 2 Now use your second factor for authentication.

### 2.1 App on the smartphone

If you have saved an authentication app as a second factor, then a corresponding push notification will appear automatically on your smartphone, depending on your settings.



### 2.2 USB security key

If you have saved a USB security key as a second factor, now insert it into a free USB port in your XENTRY Diagnosis Pad | Pad 2.



- 3 You are now authenticated and can continue working in XENTRY Diagnosis as usual.

